


INSTALLATION INSTRUCTIONS

Model 9036 Strong Box

IMPORTANT BEFORE YOU BEGIN

Read these instructions and warnings completely before installation.

Approximate Installation time:
18 min. per unit (0.3 hrs.)
Depending on van equipment
installation experience.

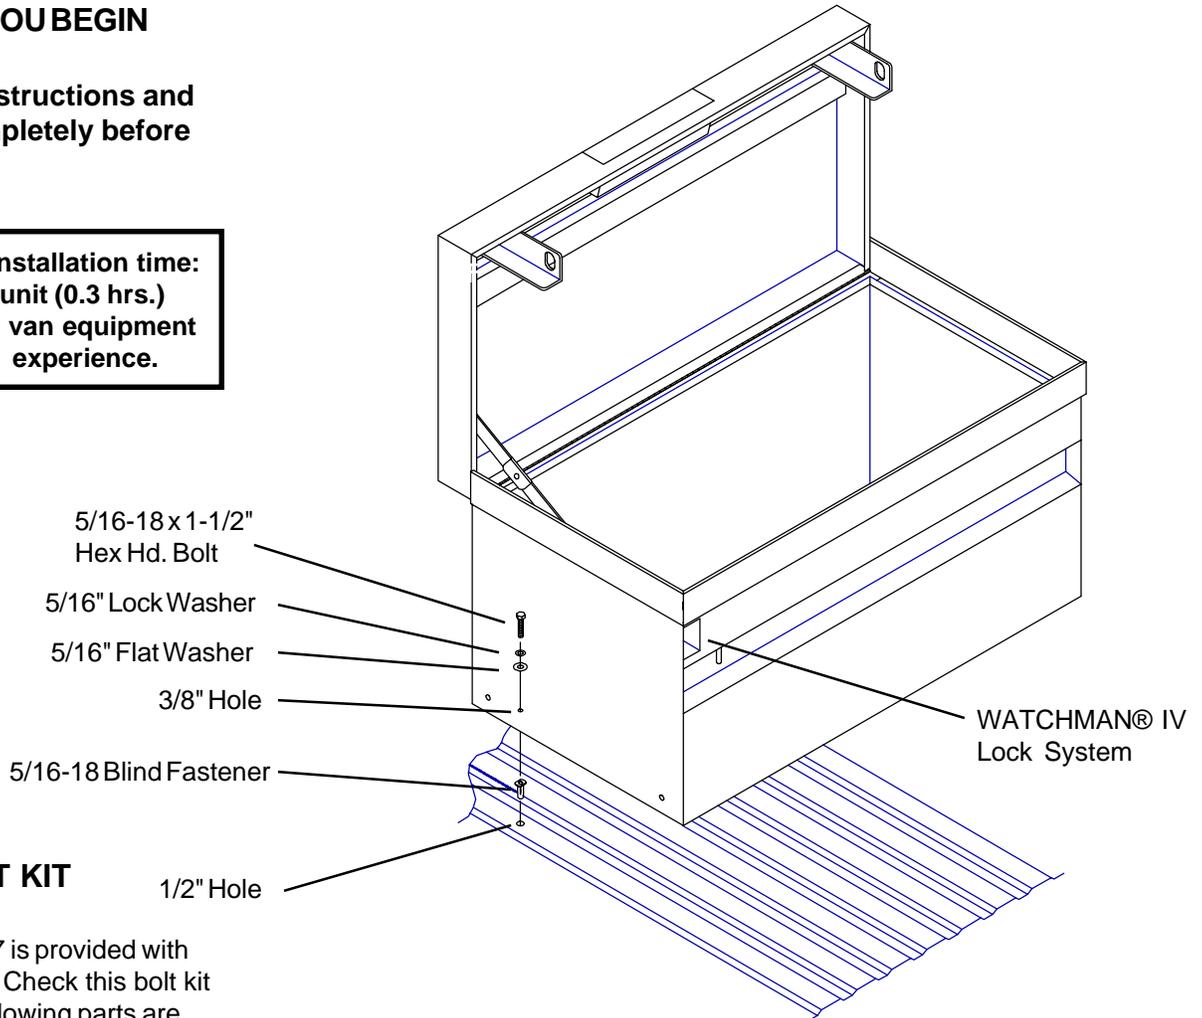

BOLT KIT

Bolt Kit #32-0167 is provided with your strong box. Check this bolt kit to be sure the following parts are included:

Quan.	Description
4	5/16-18 x 1-1/2" Hex Hd. Bolt
1	5/16-18 Nylon Lock Nut
5	5/16" Flat Washer
4	5/16-18 Blind Fastener
1	5/16-18 x 2-1/4" Blk. Ox. Bolt
4	5/16" Lock Washer
1	Installation Tool

TOOLS REQUIRED

- Electric Drill
- 3/16", 3/8" & 1/2" Drill Bits
- 1/2" Open or Box End Wrench
- 9/16" Open or Box End Wrench

⚠ DANGER

Danger of explosion. Do not use this product for storing or transporting flammables, explosives, hazardous materials, or hazardous waste, such as containers of gasoline, solvents, gun powder, dynamite, propane tanks, acetylene tanks, cutting torches and gas powered equipment. This product is only intended and safe for use in storing and transporting small tools, equipment and other similar materials. Any modifications made to, or unintended use of this product, could create a hazardous condition that can cause death, serious personal injury or property damage.

Rev. E 1/01 Part No. 24-9036

weather guard[®]
DIVISION OF KNAACK MFG. CO.

INSTALLATION INSTRUCTIONS

1. Set the box into position in the vehicle and open the cover.

⚠ CAUTION

To keep debris out of your eyes when checking the underside of the vehicle, or when drilling, always wear protective eyewear.

⚠ WARNING

Prior to drilling, so as not to cut or puncture fuel tanks, fuel lines, brake lines, electric wires, etc., check under vehicle for locations.

⚠ WARNING

All floor mounting bolts near the gas tank area should be installed from the underside of the vehicle, to guard against the gas tank being punctured in the event of a collision. This would mean not using Blind Fasteners in this area. Holes drilled in this area should be 3/8".


2. Making sure you are drilling through the top area of the ribs in the floor of the vehicle, drill four holes through the box and floor using a 3/16" drill bit. Re-drill the holes in the box with a 3/8" drill bit, and the holes in the vehicle floor with a 1/2" drill bit.

NOTE: One extra 5/16" Flat Washer and one 5/16-18 Nylon Lock Nut are provided if the Blind Fastener can't be used.

3. Install Blind Fasteners (see Blind Fastener installation instructions below), then bolt the box to the floor.

INSTALLATION PROCEDURE USING BLIND FASTENERS

Place a drop of oil on the black oxide bolt before assembling as shown on right. Place the Blind Fastener in the hole and use a 1/2" or 7/16" wrench to tighten black hex bolt until the blind fastener is fully seated. When setting black hex bolt, it will start out hard. As the Blind Fastener "bulbs" out it will get easier, until it bottoms out or sets. Make sure the Blind Fastener and Installation Tool do not turn during installation.

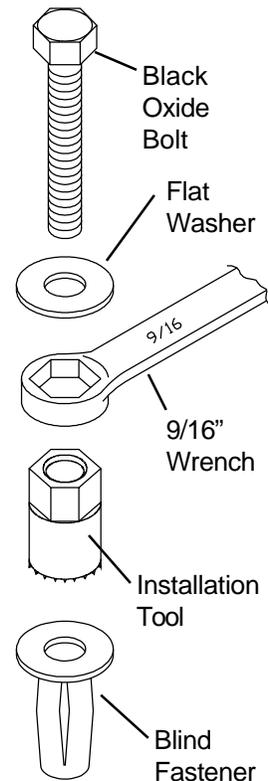

- NOTICE -

Any modification or unintended use of this product shall immediately void all manufacturers warranties. Manufacturer disclaims all liability for injuries to persons or property resulting from any modification to, or unintended use of this product.

If you have any questions, please give us a call. Call Toll Free 1-800-456-7865

WEATHER GUARD® products are protected by one or more of the following patents and trademarks: U.S. - 5076078, 945736, 1663369, 842268, 1661625, 2228051, 2362167; Canada - 1142767, 283281, 282725; U.K. - 2233036, 1400720; N.Z. - 296049; Aus. -761964
Other patents and trademarks pending.

KNAACK
MANUFACTURING
COMPANY

KNAACK MANUFACTURING COMPANY

420 E. TERRA COTTA AVENUE
CRYSTAL LAKE, ILLINOIS, USA 60014
815-459-6020

©2001 Knaack Manufacturing Company

